

FIELD CONNECTION WIRES-----18 GAGE
 POINT WIRES-----22 GAGE
 STATION WIRES-----22 GAGE
 AUDIO WIRES-----22 GAGE SHEILD

NOTE!
 RUNS OVER 750 FT INCREASE FIELD CONNECTION
 WIRES AND POINT WIRES ONE GAGE SIZE.

A CONNECTOR IS SUPPLIED
 WITH EACH PATIENT STATION.
 WIRES NOT USED MUST BE
 ELECTRICALLY ISOLATED

**500-188
 CONNECTOR
 REQUIRED**

REMOVE TRANSISTOR Q3
 FROM DOMELIGHT PCB

900-153

IT IS RECOMMENDED THAT A FIELD CONNECTION
 CABLE RUN FROM THE CONTROL PANEL BE LOOPED
 DOME LIGHT JUNCTION BOX TO DOME LIGHT JUNCTION
 BOX FOR EACH SIDE OF A HALLWAY.

KEY BK WH/GR WH/RD WH OR RD

POINTS (1-80)
 900-203
 CONTROL PANEL

POINTS (1-80)
 900-203
 CONTROL PANEL

EMERGENCY LOW

GROUND


ROOM COMMON

+ 24 FLD

FIELD CONNECTIONS
 900-203 CONTROL PANEL



900-535

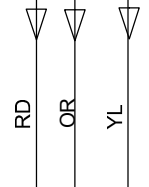

900-119

Engineered Electronics, Inc 4301 Industrial Access Road Douglasville, GA. 30134			
TITLE VISUAL PATIENT STATION WITH POINT AND DOME OUTPUT PER BED.			
SIZE A	DRAWING NO. 106-001	REV	
SCALE	DATE 7-03-06		